




~ Branson ~


Contents / Inhalt / Contenu / Inhoud:

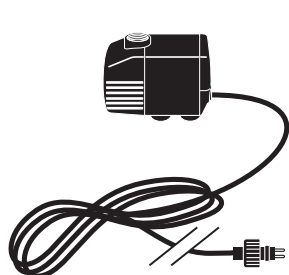

1 x 1409956 EU



1 x 1409851 EU

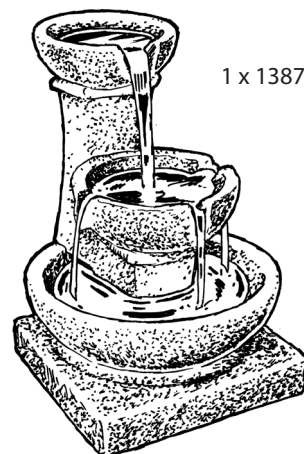


1 x 1387109




1 x 1428055 (4x)




1 x 1409848 EU

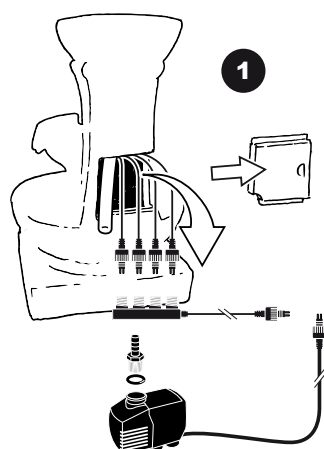


1

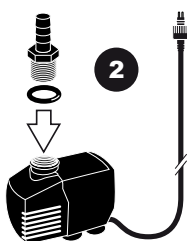


2

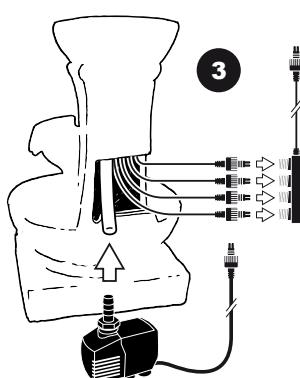


3

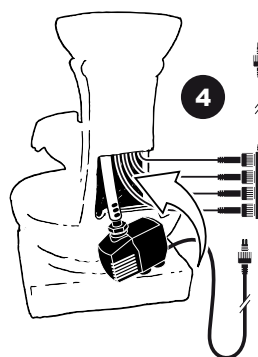

4

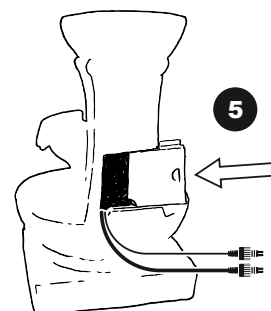

5

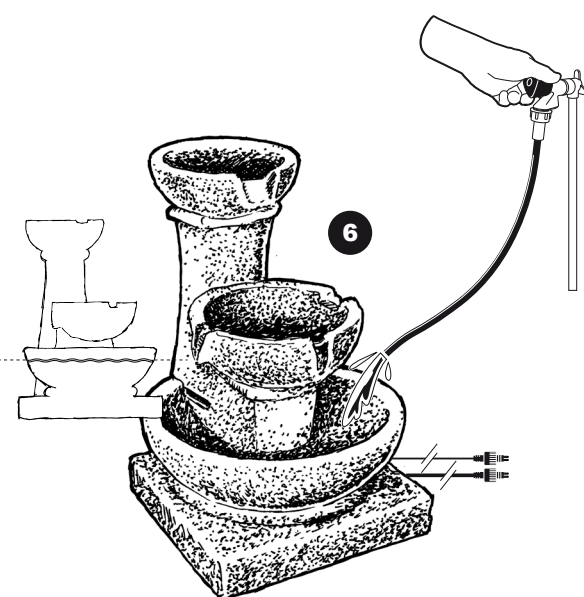

6



7

- During severe frost switch off the pump, remove ornament and pump!
- Bei strengem Frost sollte das Set aus geschaltet sowie das Deko-Element und Pumpe entfernt werden!
- Tijdens strenge vorst set uitschakelen, ornament en pomp verwijderen!
- Protégez votre fontaine décorative et mettez votre pompe à l'arrêt pendant la période d'hiver.

